



Hauler Checklist for Proper Grease Trap Or Interceptor Pumping and Maintenance:

- ✓ Pump out grease trap **completely**.
- ✓ Remove grease and scum from baffles.
- ✓ Wash and scrape sides and walls of grease trap to remove grease that may be stuck.
- ✓ Visually inspect trap and piping; note any defects on the grease manifest.
- ✓ Refill grease trap completely with clean cold water.